


PHOTOLUX[®]

DESKTOP SLIDE VIEWER

SV-3 LED

Operation Instructions

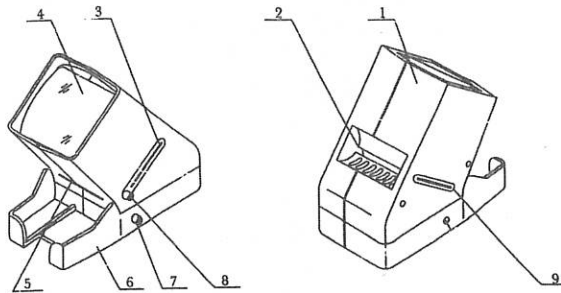

Various Parts of the Desktop Slide Viewer:

- | | |
|---------------------|---------------------------|
| (1) Body | (6) Slide Receiving Tray |
| (2) Slide Entrance | (7) On/Off Button |
| (3) Film Entrance | (8) Slide Ejection Button |
| (4) Magnifying Lens | (9) Film Exit |
| (5) Slide Exit | |

Battery Loading:

Remove the battery compartment cover from the bottom of the Desktop Slide Viewer. Insert 4 pieces of "AA" size alkaline batteries into the compartment aligning the polarity correctly according to the indications. Put the battery compartment cover back to its original position.

Operation:

1. Push the On/Off Button to turn on the light.
2. To view a slide, push the slide into the Slide Entrance and view its magnified image through the Magnifying Lens.
3. To remove the slide, push the Slide Ejection Button to eject the slide into the Slide Receiving Tray through the Slide Exit.
4. The unit is also capable of being used to view a roll of negative/positive film. Make sure the film is flat and then feed it through the unit, entering via the Film Entrance on the right hand side of the unit (with the Magnifying Lens facing oneself) and exiting via the Film Exit on the left. Move the film left or right to position the picture desired to be seen beneath the Magnifying Lens.

Cautions:

1. If the Slide Viewer is not to be used for a long time, remove the batteries from the battery compartment and keep the Slide Viewer in a dry place.
2. Clean the Magnifying Lens with soft dry cotton cloth or lens cleaning paper.

Specifications:

Power source	4 x 1.5V AA size alkaline cells or AC/DC Adaptor 6V 500mA (optional)
Magnifying power	3X
Light source	LED
External dimensions	165 x 155 x 80 (mm)
Net weight	500 g